


ASSEMBLY INSTRUCTIONS FOR YOUR ALBERT SWING ARM SCONCE

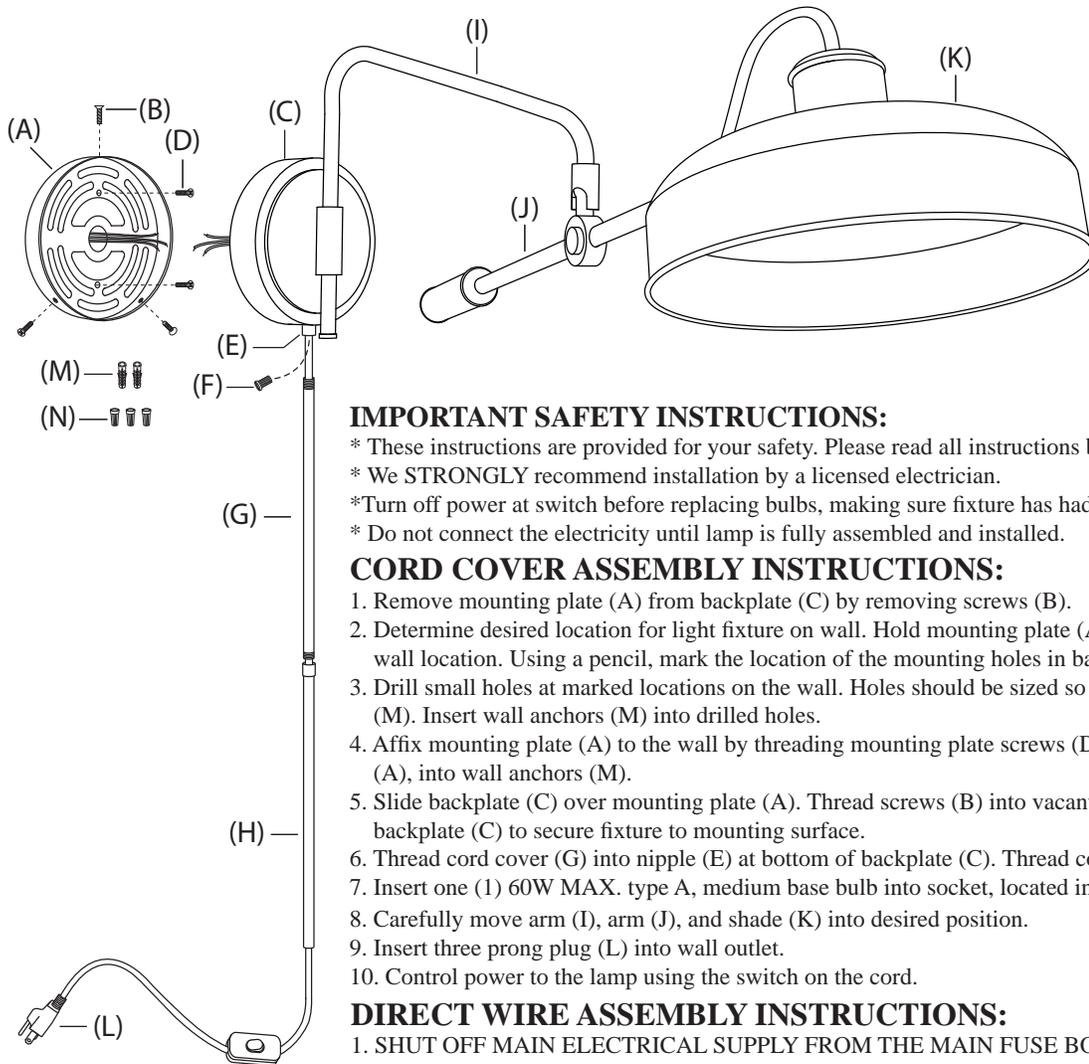

IMPORTANT SAFETY INSTRUCTIONS:

- * These instructions are provided for your safety. Please read all instructions before beginning installation.
- * We **STRONGLY** recommend installation by a licensed electrician.
- * Turn off power at switch before replacing bulbs, making sure fixture has had sufficient time to cool down.
- * Do not connect the electricity until lamp is fully assembled and installed.

CORD COVER ASSEMBLY INSTRUCTIONS:

1. Remove mounting plate (A) from backplate (C) by removing screws (B).
2. Determine desired location for light fixture on wall. Hold mounting plate (A) in a level position on desired wall location. Using a pencil, mark the location of the mounting holes in backplate (A) onto the wall.
3. Drill small holes at marked locations on the wall. Holes should be sized so they accommodate the wall anchors (M). Insert wall anchors (M) into drilled holes.
4. Affix mounting plate (A) to the wall by threading mounting plate screws (D) through holes in mounting plate (A), into wall anchors (M).
5. Slide backplate (C) over mounting plate (A). Thread screws (B) into vacant holes at the top and bottom of backplate (C) to secure fixture to mounting surface.
6. Thread cord cover (G) into nipple (E) at bottom of backplate (C). Thread cord cover (H) on to cord cover (G).
7. Insert one (1) 60W MAX. type A, medium base bulb into socket, located inside shade (K).
8. Carefully move arm (I), arm (J), and shade (K) into desired position.
9. Insert three prong plug (L) into wall outlet.
10. Control power to the lamp using the switch on the cord.

DIRECT WIRE ASSEMBLY INSTRUCTIONS:

1. **SHUT OFF MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER.**
2. Remove mounting plate (A) from backplate (C) by removing screws (B).

3. Cut three prong plug (L) from the end of the electrical cord.
4. From the back side of backplate (C), pull the remainder of electrical cord up through nipple (E).
5. Cut the cord to the desired length for making electrical connection. At least six inches of wire will be needed to make a proper connection.
6. Carefully unscrew nipple (E) from backplate (C). Thread plug (F) into hole vacated by electrical cord and nipple (E).
7. Carefully pull the wiring from wall outlet box. Thread the wires through the center hole in mounting plate (A).
8. Affix mounting plate (A) to wall outlet box with mounting plate screws (D) provided.
9. Make proper electrical connections described in steps 10 - 12. **A LICENSED ELECTRICIAN IS RECOMMENDED.**
10. Connect ground (green or silver in color) wire from fixture to ground wire in the outlet box. Fasten wires together with wire nut (N) and tightly wrap the connection with electrical tape.
11. Attach hot wire from fixture (black in color or smooth side of wire) to hot wire from outlet box. Fasten wires together with wire nut (N) and tightly wrap connection with electrical tape.
12. Attach neutral wire from fixture (white in color or ribbed side of wire) to neutral wire from outlet box. Fasten wires together with wire nut (N) and tightly wrap connection with electrical tape.
13. Carefully push wire connections back into wall outlet box.
14. Slide backplate (C) over mounting plate (A). Thread screws (B) into vacant holes around the edge of backplate (C) to secure fixture to mounting plate (A).
15. Follow steps 7 - 8 from CORD COVER ASSEMBLY INSTRUCTIONS, above.
16. Reconnect main electrical supply from the fuse box/ circuit breaker and test fixture.

** To clean, wipe with a soft cloth **ONLY**. Do not use any chemical or abrasive cleaners as they may damage the finish. **