

ASSEMBLY INSTRUCTIONS FOR YOUR ANDROMEDA FLOOR LAMP

IMPORTANT SAFETY INSTRUCTIONS:

- * This lamp has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If it does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do NOT alter the plug.
- * Do not use with an extension cord unless the plug from the lamp can be fully inserted into the extension cord receptacle.
- * Switch power off and remove plug from the wall outlet before replacing the bulb.
- * This lamp is UL rated for dry locations.

ASSEMBLY INSTRUCTIONS:

NOTE: Do not connect electricity until lamp is fully assembled.

- 1. Unpack all parts and remove packing materials. Place lamp base on a level surface.
- 2. Pull cord taut from below base (H) to avoid damage to cord. Thread column (G) onto base (H).
- 3. Remove finial (A) from harp (C). Squeeze harp (C) inward and place into the opening of saddle (D).
- 4. Place shade (B) onto harp (C). Thread finial (A) back onto the harp to secure the shade to the lamp.
- 5. Thread rods (E) into housing (F) until hand tight. Note: do not over tighten as this could cause damage to rods. Note: Grasp acrylic rods at base, near threads to avoid damage to acrylic and cap. Do not force rods into housing. If you experience difficulty threading a rod into the housing at chosen spot, don't try to force the parts to thread together. Instead, try threading the rod into a different opening in the housing.
- 6. Install one 150W max., type A, medium base bulb into the socket.
- 7. Remove protective plastic from plug (I).
- 8. Insert plug (I) into wall outlet.



