


# Robert Abbey, Inc.

## ASSEMBLY INSTRUCTIONS FOR YOUR KINETIC FLOOR LAMP

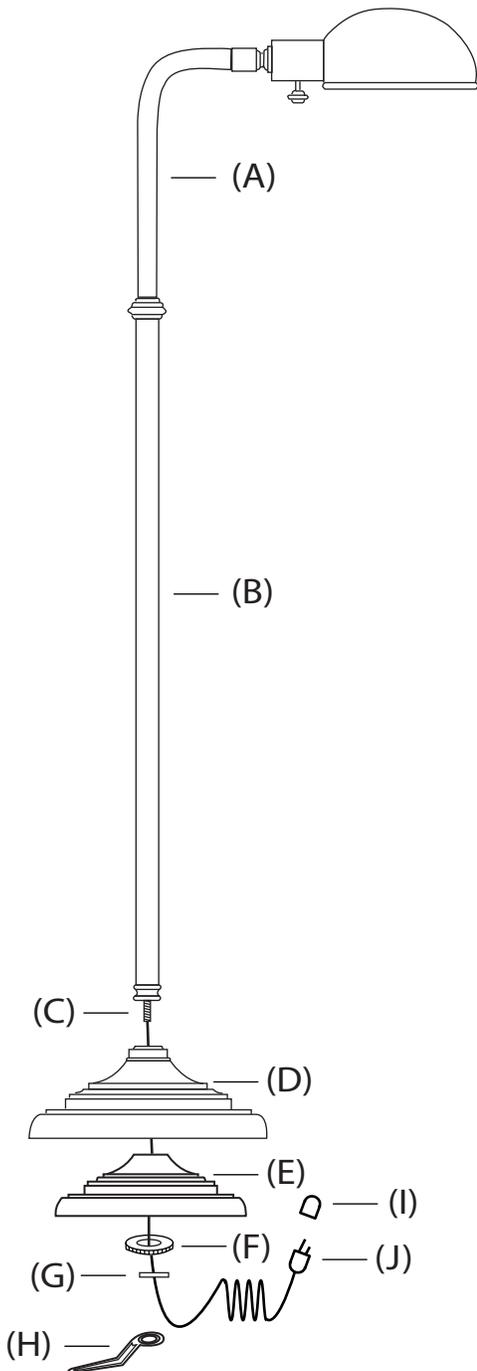

### ASSEMBLY INSTRUCTIONS

1. Unpack and place all parts on a level surface.
2. Align column (B) with base (D), pulling cord from below loader (E) to prevent damage to the wire. Insert threaded nipple (C) through hole in base (D) and loader (E).  
CAUTION: BE CAREFUL NOT TO DAMAGE WIRE WHEN ATTACHING BASE (D) TO THREADED NIPPLE (C).
3. Hold base (D), loader (E), and column (B) together while pulling cord tightly from below base. Carefully turn lamp over onto its side.
4. Slide washer (F) and nut (G) up wire and attach to exposed portion of threaded nipple (C). Tighten nut (G) with wrench (H) provided to secure base (D) and loader (E) to column (B).
5. Install one (1) 60 watt maximum Type A bulb into socket.
6. Remove protective cap (I) from polarized plug (J).
7. Insert polarized plug (J) into wall outlet.

### ADJUSTMENT INSTRUCTIONS

To increase the height of lamp, firmly grasp column (B) and carefully pull column (A) up to desired position. To lower the height of the lamp, firmly grasp column (B) and gently push column (A) down to desired position.

### IMPORTANT SAFETY INSTRUCTIONS

Turn the power off (unplug from the wall outlet) before replacing the bulb, making sure the bulb has had sufficient time to cool down. Do not subject the lamp to any shock while lit as shattering of bulb may result.

This portable lamp has a polarized plug (one blade is wider than the other) as a feature to reduce risk of electric shock, this plug will fit in a polarized outlet only one way. If it does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless the plug can be fully inserted. **DO NOT ALTER THE PLUG.**