


# ASSEMBLY INSTRUCTIONS FOR YOUR BUSTER CHICA FLOOR LAMP

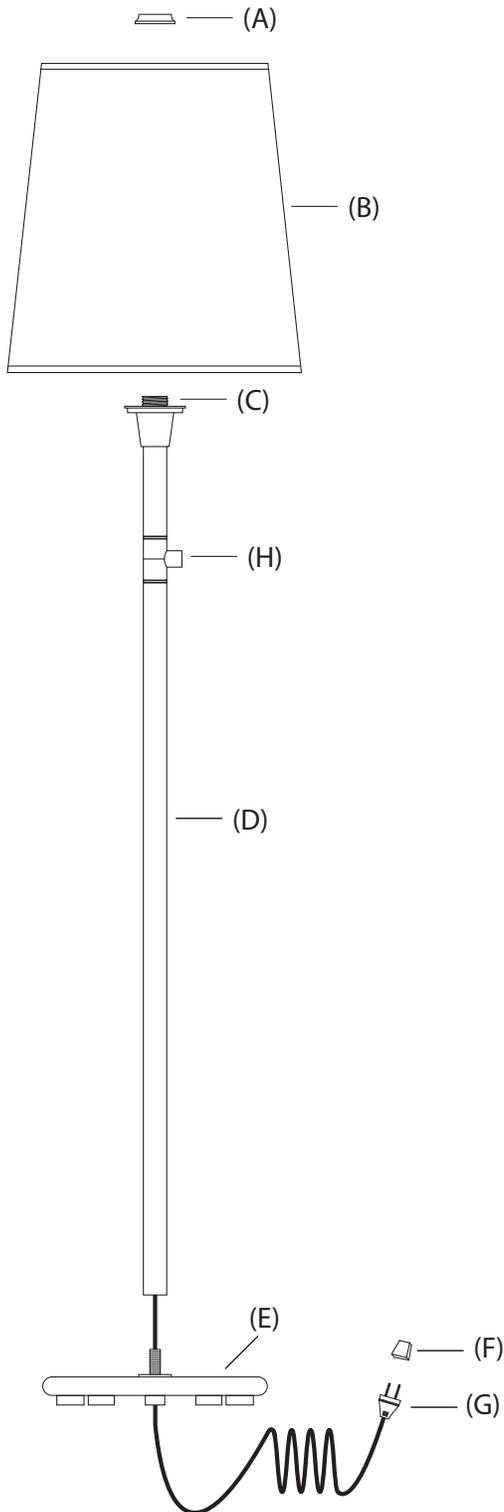

## IMPORTANT SAFETY INSTRUCTIONS

\*Turn the power off (remove electrical plug from wall outlet) before replacing light bulb, making sure the bulb has had sufficient time to cool down. Do not subject the lamp to any shock while lit as shattering of bulb may result.

\*This portable lamp has a polarized plug (one blade is wider than the other) as a feature to reduce risk of electric shock, this plug will fit in a polarized outlet only one way. If it does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless the plug can be fully inserted.

\*DO NOT ALTER THE PLUG.

## ASSEMBLY INSTRUCTIONS:

**NOTE:** Do not connect the electricity until lamp is fully assembled.

1. Unpack all parts and remove packing materials.
2. Place base (E) on a level surface.
3. Move column (D) toward base (E), pulling wire from below base (E). Attach column (D) to threaded nipple on base (E) by turning column (D) in clock-wise direction.
4. Remove flange (A) from threaded socket (C).
5. Slide center ring of shade spider (located inside shade (B)) over threaded socket (C).
6. Thread flange (A) onto socket (C) to secure shade (B) to lamp.
7. Install one (1) 150W MAX Type A bulb into socket (C).
8. Remove protective plastic (F) from polarized plug (G).
9. Insert polarized plug (G) into wall outlet.
10. Use knob (I) to control power to lamp. NOTE: This lamp uses a full range dimmer switch. Each switch will stop turning once full illumination is reached. Turn the switch GENTLY to adjust light intensity. TURNING KNOB (H) TOO FAR COULD CAUSE THE SWITCH TO SHORT OUT.

\*\*To clean, use a soft cloth only. Do not use chemical or abrasive cleaners.\*\*