



ASSEMBLY INSTRUCTIONS FOR YOUR
WILLIAMSBURG MING FLOOR LAMP

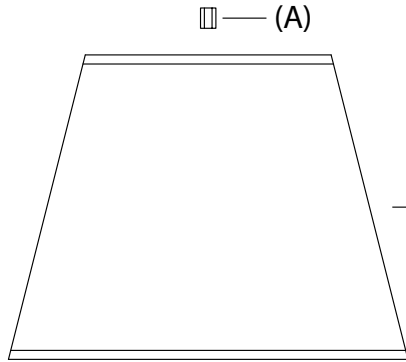

IMPORTANT SAFETY INSTRUCTIONS:

- * This lamp has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If it does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do NOT alter the plug.
- * Do not use with an extension cord unless the plug from the lamp can be fully inserted into the extension cord receptical.
- * Switch power off and remove plug from the wall outlet before replacing the bulb.

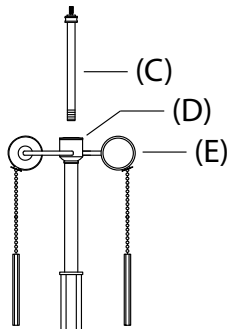

ASSEMBLY INSTRUCTIONS:

NOTE: Do not connect electricity until lamp is fully assembled.

1. Unpack all parts and remove packing materials. Place lamp base on a level surface.
2. Remove finial (A) from shade raiser (C). Thread shade riser (C) into socket housing (D).
3. Place shade (B) onto shade raiser (C). Thread finial (A) back onto the shade riser (C) to secure the shade to the lamp.
4. Install two 100W max., type A, medium base bulbs into the sockets (E).
5. Insert plug (F) into wall outlet.

To clean, use a soft cloth only. Do not use any chemical or abrasive cleaners.

