

ASSEMBLY INSTRUCTIONS FOR YOUR

**Jonathan Adler**

**MEURICE TASK FLOOR LAMP**

**IMPORTANT SAFETY INSTRUCTIONS:**

- \* This portable lamp has a polarized plug (one blade is wider than the other) as a feature to reduce risk of electric shock, this plug will fit in a polarized outlet only one way. If it does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician.
- \* Never use with an extension cord unless the plug can be fully inserted. **DO NOT ALTER THE PLUG.**
- \* Turn the power off (unplug from the wall outlet) before replacing the bulb, making sure the bulb has had sufficient time to cool down. Do not subject the lamp to any shock while lit as shattering of lamp may result.

**ASSEMBLY INSTRUCTIONS:**

NOTE: Do not connect the electricity until lamp is fully assembled.

1. Remove all parts from carton. Do not throw away any parts.
2. Place loader (F) on a level surface. Pull cord tight and slide base (E) over loader (F).
3. Move column (D) towards base (E) and loader (F). Pull wire from below loader (F), and place threaded nipple (L) through hole in the center of base (E) and loader (F). Threaded nipple (L) will protrude through the bottom side of loader (F). Note: pull cord tight when placing threaded nipple (L) through base (E) and loader (F) to prevent damage to the wire.
4. Hold base (E), loader (F), and column (D) together and carefully tilt lamp to the side.
5. Slide washer (G) and nut (H) up cord and attach to threaded nipple (L). To secure base (E) and loader (F) to column (D), tighten nut (H) with wrench (I), provided.
6. Carefully tilt assembled base (E), loader (F) and column (D) back into upright position.
7. Install one (1) 100W max. Type A, medium base bulb into socket, located inside shade (A)
8. Remove protective plastic (K) from polarized plug (J). Insert polarized plug (J) into wall outlet.
9. To adjust height, loosen turn knob (C) by turning in a counter clockwise direction. Do not fully remove turn knob (C) from lamp. Carefully slide column (B) up/down until desired position is reached. Tighten turn knob (C) to secure desired position.

- NOTE: Gently pull cord taut from below base when adjusting height to prevent damage to the cord
- \* To clean, use a soft cloth only. Do not use any chemical or abrasive cleaners. \*

