


Robert Abbey, Inc.

ASSEMBLY INSTRUCTIONS FOR YOUR WILLIAMSBURG DICKINSON TABLE LAMP

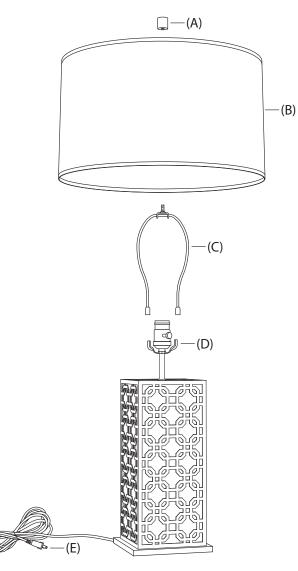

IMPORTANT SAFETY INSTRUCTIONS:

- * This lamp has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If it does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do NOT alter the plug.
- * Do not use with an extension cord unless the plug from the lamp can be fully inserted into the extension cord receptacle.
- * Switch power off and remove plug from the wall outlet before replacing the bulb.

ASSEMBLY INSTRUCTIONS:

NOTE: Do not connect electricity until lamp is fully assembled.

- 1. Unpack all parts and remove packing materials. Place lamp base on a level surface.
- 2. Remove finial (A) from harp (C). Squeeze harp (C) inward and place into the opening of saddle (D).
- 3. Place shade (B) onto harp (C). Thread finial (A) back onto the harp to secure the shade to the lamp.
- 4. Install one 150W max., type A, medium base bulb into the socket.
- 5. Remove protective plastic from plug (E).
- 6. Insert plug (E) into wall outlet.

To clean, use a soft cloth only. Do not use any chemical or abrasive cleaners.