


ASSEMBLY INSTRUCTIONS FOR YOUR
MINI DOUGHNUT
SINGLE ARM SCONCE

IMPORTANT SAFETY INSTRUCTIONS:
These instructions are provided for your safety.
It is very important that they are read completely
before beginning the installation of your fixture.
We strongly recommend that a professional
electrician install all direct wire fixtures.

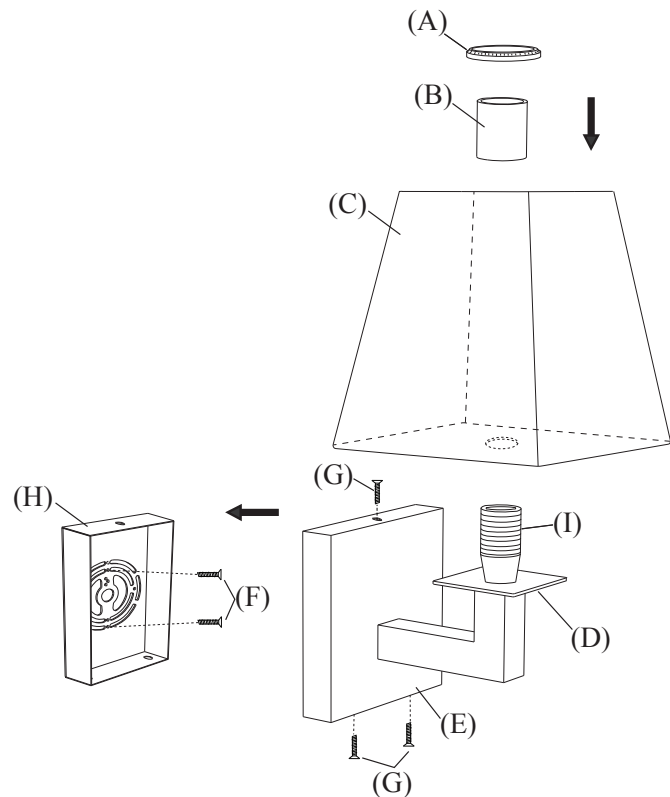

DIRECT WIRE ASSEMBLY INSTRUCTIONS

1. SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER.
2. Remove all parts from the carton. Do not throw away any parts.
3. Remove the mounting plate (H) from the base of the fixture (E) by removing the base screws (G).
4. Gently pull the wiring from the wall outlet box and allow the wires to hang. Thread the wires through the center hole in the mounting plate (H).
5. Affix the mounting plate (H) to the wall outlet box with the mounting plate screws (F) provided.
6. Connect the copper wire from fixture to ground.
7. Connect rough side of wire from fixture to white wire.
8. Connect smooth side of wire from fixture to black wire.
9. Attach fixture (E) to the mounting plate (H). Secure fixture (E) to the mounting plate (H) with base screws (G).
10. Remove flange (A) from threaded socket (I). Remove collar (B) from threaded socket (I).
11. Align hole in glass shade (C) with threaded socket (I). Slide glass shade (C) down threaded socket (I) until glass shade (C) rest on plate (D).
12. Slide collar (B) down threaded socket (I) until collar rest on the inside of glass shade (C).
13. Secure glass shade to fixture by threading flange (A) onto threaded socket (I).