


ASSEMBLY INSTRUCTIONS FOR YOUR ALBERT THREE LIGHT WALL SCONCE

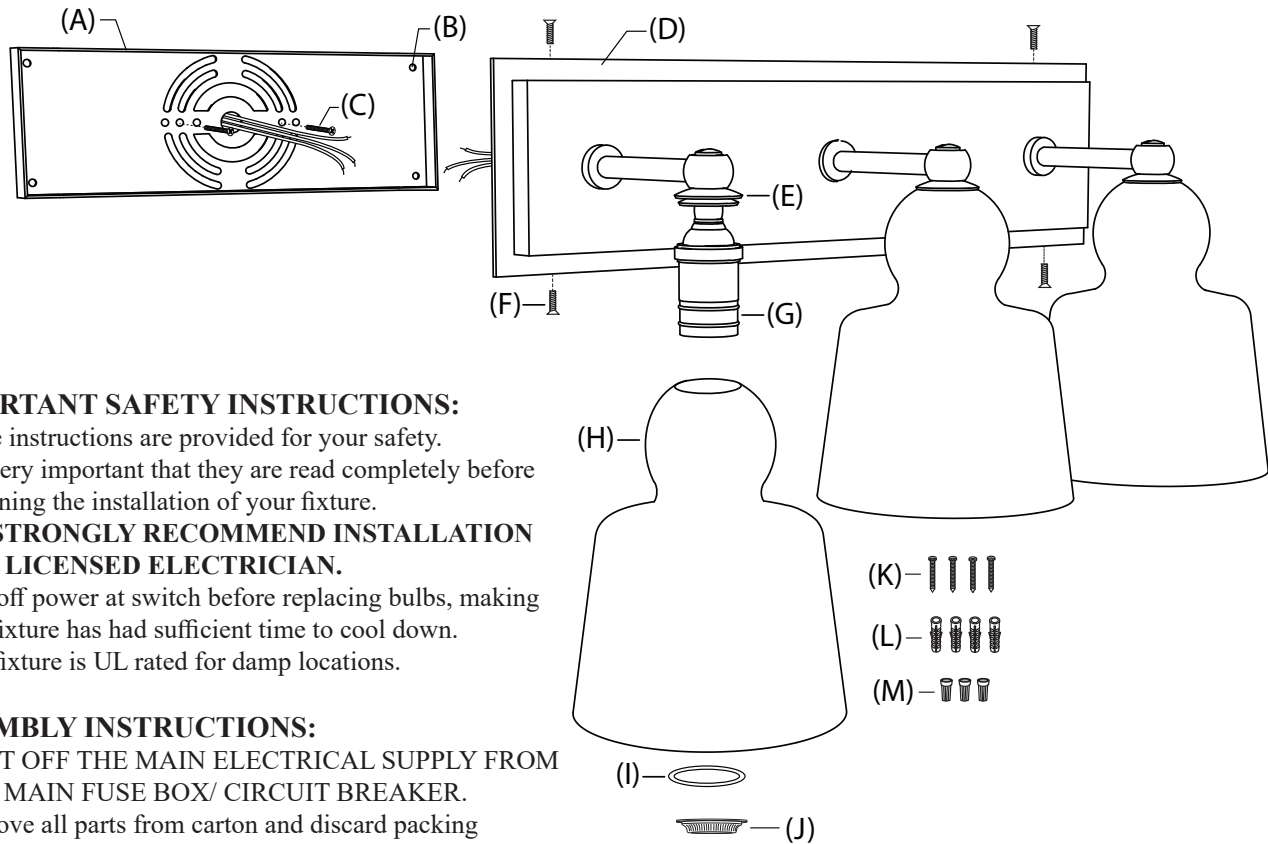

IMPORTANT SAFETY INSTRUCTIONS:

- * These instructions are provided for your safety.
- * It is very important that they are read completely before beginning the installation of your fixture.
- * **WE STRONGLY RECOMMEND INSTALLATION BY A LICENSED ELECTRICIAN.**
- * Turn off power at switch before replacing bulbs, making sure fixture has had sufficient time to cool down.
- * This fixture is UL rated for damp locations.

ASSEMBLY INSTRUCTIONS:

1. SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/ CIRCUIT BREAKER.
2. Remove all parts from carton and discard packing materials. Place the parts on a level surface.
3. Remove mounting plate (D) from backplate (A) by unthreading screws (F). Set screws (F) aside. Place the mounting plate (A) against the mounting surface so it is aligned with the wall outlet box. Once aligned, check to make sure that the mounting plate is level. When proper placement has been confirmed, use a pencil to mark the locations of the mounting plate support holes (B) onto the mounting surface.
4. Set the mounting plate aside and drill small holes at the marked locations. Holes should be sized so anchors (L) fit securely inside.
5. Push anchors (L) into the holes.
6. Carefully pull wires from the wall outlet box and thread them through the center hole in mounting plate (A).
7. Affix mounting plate (A) to wall outlet box with mounting screws (C) provided.
8. For additional support, thread mounting screws (K) through holes (B) and into wall anchors (L).
9. Lift the backplate (D) to the mounting plate (A) and make the proper electrical connections noted in steps 10 through 12.
A LICENSED ELECTRICIAN IS RECOMMENDED.
10. Attach ground wire from fixture (green or copper in color) to ground wire from outlet box. Fasten wires together with wire nut (M) and tightly wrap connection with electrical tape.
11. Attach hot wire from fixture (black in color or smooth side of wire) to hot wire from outlet box. Fasten wires together with wire nut (M) and tightly wrap connection with electrical tape.
12. Attach neutral wire from fixture (white in color or ribbed side of wire) to neutral wire from outlet box. Fasten wires together with wire nut (M) and tightly wrap connection with electrical tape. Gently push wire connections back into the wall outlet box.
13. Place backplate (D) over mounting plate (A). Use screws (F) to secure the backplate to the mounting surface.
14. Slide shade (H) over socket (G) until it rests against shade housing (E). Holding shade in place, slide plastic washer (I) over socket and thread flange (J) onto socket (G) until hand tight. Note: Do not overtighten the flange as this may cause damage to glass.
15. Install three 60W max., type A, medium base bulbs into the sockets (G).
16. Reconnect main electrical supply at the fuse box/ circuit breaker and test the fixture.