


ASSEMBLY INSTRUCTIONS FOR YOUR **Jonathan Adler** MILANO WALL SCONCE

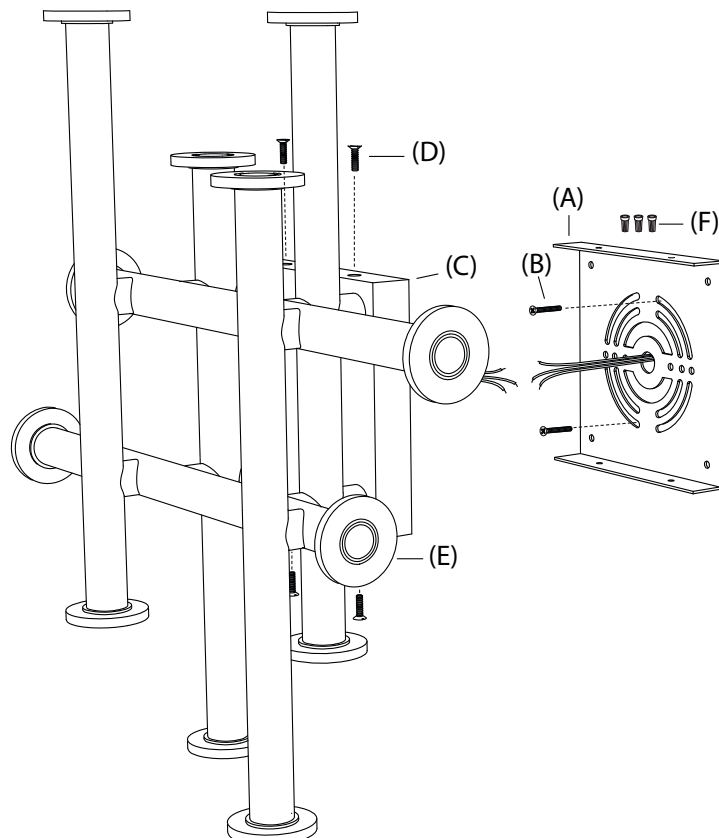

IMPORTANT SAFETY INSTRUCTIONS:

*These instructions are provided for your safety. It is very important that they are read completely before beginning the installation of your fixture.

***WE STRONGLY RECOMMEND INSTALLATION BY A LICENSED ELECTRICIAN.**

*Turn off power at switch before replacing bulbs.

*If any special control devices are used with this fixture, follow the instructions carefully to assure full compliance with N.E.C. requirements. If there are any questions, contact a qualified electrical contractor.

*This fixture is UL rated for dry locations.

ASSEMBLY INSTRUCTIONS:

DIRECT WIRE ASSEMBLY INSTRUCTIONS:

1. SHUT OFF MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER. IT IS RECOMMENDED THAT A LICENSED ELECTRICIAN INSTALL THIS FIXTURE.
2. Remove mounting plate (A) from backplate (C) by removing screws (D).
3. Carefully pull the wiring from wall outlet box. Thread wires through the center hole in mounting plate (A).
4. Affix mounting plate (A) to wall outlet box with mounting screws (B) provided.
5. Lift fixture to mounting plate and make proper electrical connections described in steps 6-8. A LICENSED ELECTRICIAN IS RECOMMENDED.
6. Connect ground (green or silver in color) wire from fixture to ground wire in the outlet box. Fasten wires together with wire nut (F) and tightly wrap the connection with electrical tape.
7. Attach hot wire from fixture (black in color or smooth side of wire) to hot wire from outlet box. Fasten wires together with wire nut (F) and tightly wrap connection with electrical tape.
8. Attach neutral wire from fixture (white in color or ribbed side of wire) to neutral wire from outlet box. Fasten wires together with wire nut (F) and tightly wrap connection with electrical tape.
9. Carefully push wire connections back into wall outlet box. Slide backplate (C) over mounting plate (A).
10. Thread screws (D) into holes on top and bottom of the backplate (C) to secure the fixture to the mounting surface.
11. Insert (12) 25W MAX. Type G, candelabra base bulb into socket (E).
12. Reconnect main electrical supply at the fuse box/circuit breaker and test fixture.

**** To clean, use a soft cloth only. Do not use any chemical or abrasive cleaners. ****